



Aluminum Angle Spill Berm Set Up Instructions



- Once the [aluminum angle spill berm](#) has been taken out of its storage bag, lay the berm out flat and fold in the sides. At this point the berm should be pulled out to its actual size.
- Remove the aluminum angles that are bent to 90 degrees, and lay them alongside each of the pockets that are welded on. The pockets surround the outer perimeter of the berm approximately 2 ft apart.
- Slide the angles into the pockets from bottom to top with the berm sides folded in, and pockets facing up. The exposed part of the angle not in the pocket should be placed beneath the berm.
- As the 90 degree brackets are assembled to the sides, the side wall of the berm will be formed.
- Pull the sides out removing any wrinkles in the floor, and your berm is ready for use.
- When parking a vehicle or trailer on the berm, remove as many angles as necessary and fold the section down. Replace the aluminum angles when the vehicle is parked.

Options:

- To extend the life of your berm, the use of drive over mats or ground liner is recommended.
- Consider [self rising drive through ends](#) (yellow berm)

